



Reloading Instructions

Color Resin Ribbons For Use in Gerber Edge® and Edge 2 Printers

Position cartridge as shown. Pry off end caps as shown. Tabs on end caps are designed to break. Your refill package includes four replacement end caps. Open cartridge after removing end caps. Remove gears and hubs from spent ribbon. Remove spent ribbon.



Remove outer wrap from new Super-Saver Refill; tear at perforation. Place gears and hubs into the cores of the new Super-Saver Refill. Place Super-Saver Refill into cartridge as shown.



Close cartridge covers and secure with supplied end caps. Affix new label from Super-Saver Refill package to cartridge.

